



FOOD EQUIPMENT

Operating and Maintenance Instructions

Model: 6006-2,-3,-4,-5,-6,-7,-8 Infra-red Bulb Warmer

INTRODUCTION

1. Please read instructions before using this appliance.
2. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.
3. Clean machine thoroughly before and after all uses following cleaning instructions below.

ELECTRICAL REQUIREMENTS

1. Wire warmer into a grounded circuit with correct voltage and sufficient power capacity. Refer to the product label (serial plate) on the warmer for voltage and wattage requirements.
2. **All electrical connections must be made according to local codes by a licensed electrician.**

SAFETY INSTRUCTIONS

1. **Warning!** All power must be disconnected at power source before any service procedure is performed.
2. This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as drapes and other furnishings, away from appliance.
3. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left unattended.
4. Do not operate any appliance after it malfunctions, has been dropped, or damaged. Return appliance to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
5. Do not use outdoors. This appliance is not intended for use in wet or moist locations. Never locate appliance where it may fall into water.
6. This appliance has electrical parts. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
7. Turn warmer off when not in use.

INSTALLATION

Note: Installation must be made by a licensed electrician.

1. Mount warmer in desired location. Note: This unit radiates heat when in use therefore we recommend that the unit be placed above a non-combustible surface and away from walls.
2. Wire connection must be grounded and per code.
3. Screw bulbs into sockets. Note: Bulbs in multi-bulb warmers should be the same. (clear or red)
4. If warmer fails to work properly when first operated call NEMCO customer service at 1-800-782-6761.

OPERATION


1. Turn warmer to "on" position.
2. Place food products in a pan, located directly under the bulbs for best results.
3. Turn warmer off when not in use.

CLEANING

NOTE: Proper maintenance plays an important part in the life span and functioning of the warmer.

1. Turn warmer off before cleaning or changing bulbs.
2. This warmer can be cleaned with a damp sponge and mild soap. Do not immerse in water or other liquid.

Service Part List
Model: 6006-2,-3,-4,-5,-6,-7,-8 Infra-red Bulb Warmer

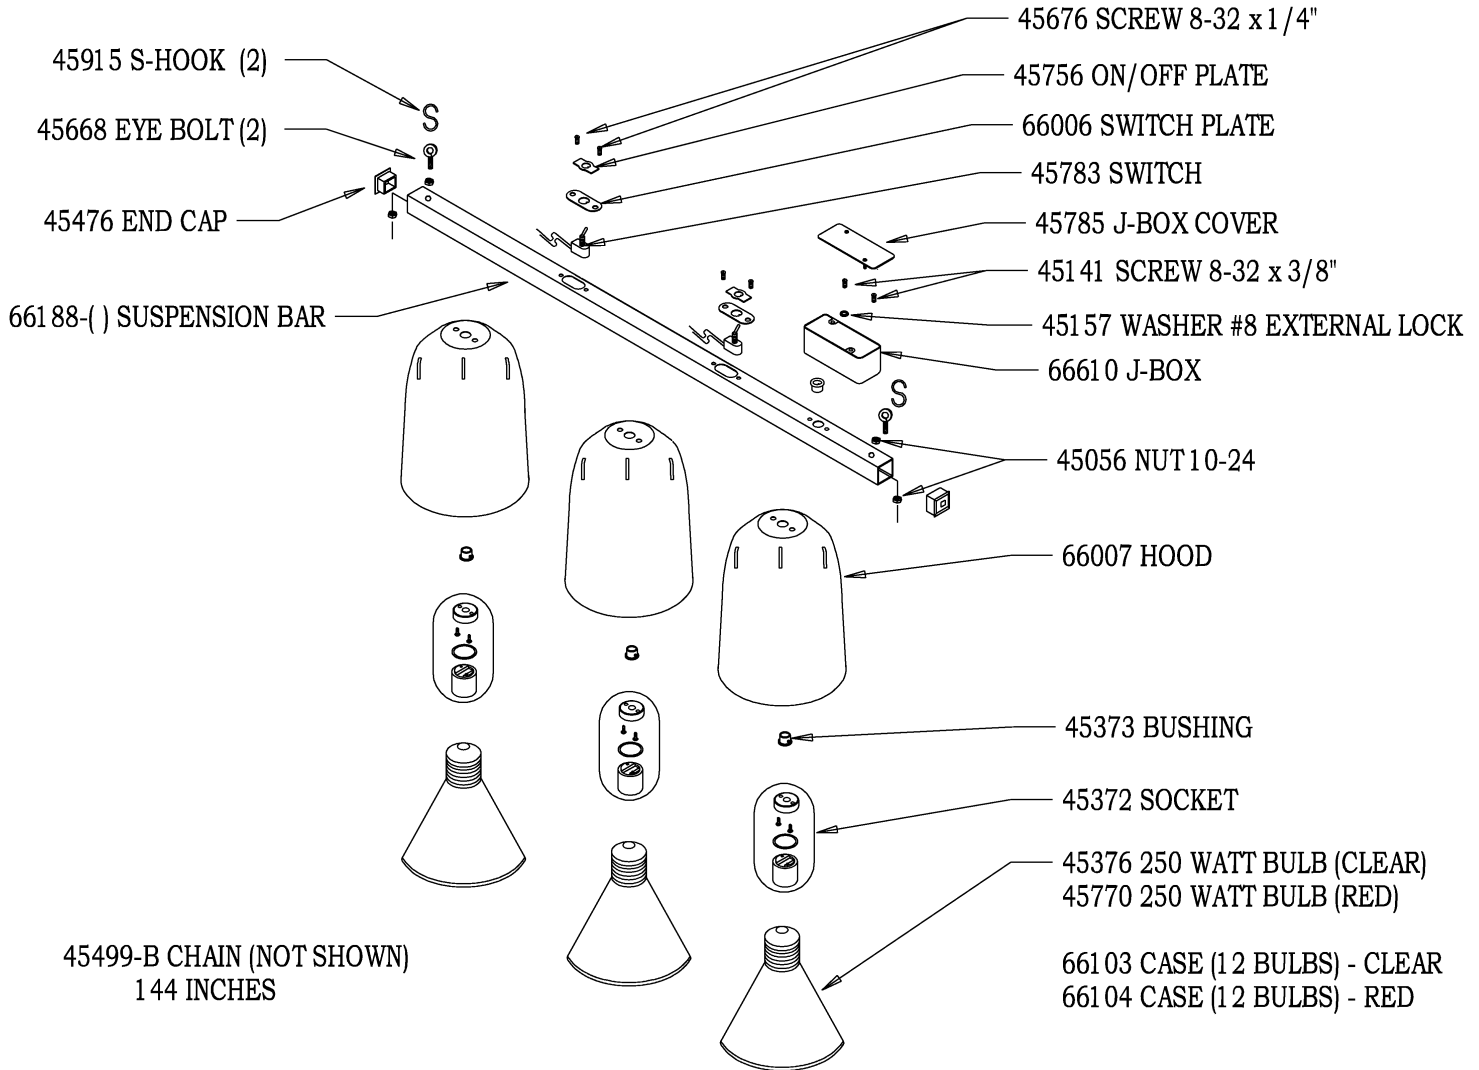

NEMCO FOOD EQUIPMENT 301 Meuse Argonne, Hicksville, OH 43526
Phone: (419) 542-7751 Fax: (419) 542-6690 Toll free: 1-800-782-6761
www.nemcofoodequip.com